


HOW TO TEST MATERIAL FOR ASBESTOS



Safely collect sample

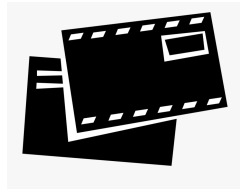

Post sample



microPHAZIR
AS Asbestos Analyzer



Emailed result

For bonded material and suspected non-friable asbestos

- Lay down a plastic drop sheet to catch any loose material that may fall off while sampling.
- Turn off any fans or air conditioning if you're inside. If outside, then sample on a non-windy day.
- Put on Class P2 respirator mask and wear a pair of disposable coveralls

1. PREPARE EQUIPMENT
2. SPRAY AREA DOWN WITH WATER
3. REMOVE SAMPLE WITH PLIERS
4. PLACE SAMPLE IN BAG & LABEL
5. PAINT EXPOSED EDGE WITH PVA GLUE



**NON-FRIABLE
ASBESTOS TEST KIT**

SAMPLING PROCEDURE (NON-FRIABLE MATERIAL)

- Dampen down the area with the water spray bottle.
- Remove a representative sample (30mm x 30mm) of material with clean pliers. Select a sample from a corner edge or along an existing hole, crack, or behind power point. If the edge is exposed, apply PVA glue to seal any fibres.
- Place sample into a resealable plastic bag, and double bag.
- Label with the Date, Site Details, Sample Number and Sample Location.
- Post in a plastic or padded sealed envelope

The report will be emailed to you with results indicating the type of fibres present including any asbestos (eg. Chrysotile, Amosite or Crocidolite).

ASBESTOS SAMPLE ANALYSIS REQUEST

Contact Name _____

Phone Number _____

Email Address _____

Postal Address _____

Street Address Sample was Collected _____

Location on property that sample was collected from: (I.e.: bedroom, or bathroom ceiling, rear fence etc.

Sample 1 _____

Sample 2 _____

Sample 3 _____

Sample 4 _____

Sample 5 _____

Sample 6 _____

Sample 7 _____

Sample 8 _____

Sample 9 _____

Sample 10 _____

Sample size If possible, please collect between a 5 and 50 cent piece of the material that requires analysis

Enclose that material in a sealed plastic bag. Repeat this process for each sample requiring analysis. Then put all bagged samples into a 2 plastic bag and seal.

Post **187 Brisbane Terrace Goodna 4300, Queensland.**

Results will be available within 60 minutes of receipt of the samples and emailed to you.

Payment Pay upon completion via a credit card payment over the phone

Filling up Credit Card Authorisation Form on page [>](#)

*Credit Card Authorisation Form

Please complete all fields. You may cancel this authorisation at any time by contacting us. This authorisation will remain in effect until cancelled.

Credit Card Information

Card Type MasterCard VISA Discover AMEX Other

Cardholder Name (as shown on card) _____

Card Number _____

Expiration Date (mm/yy) _____

Cardholder CVC Number
(from reverse side of card) _____

I, _____, authorise Asbestos Watch/Webasis to charge my credit card above for \$ _____ for asbestos testing.

Customer Signature _____ Date _____